
尺寸: 90mm*50mm

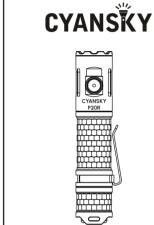


P20R 便携户外手电 产品说明书

| 模式 | 批光档 | 甲壳档 | 商売档 | 极光档 | - 深内相 | 505 |
|----------------------|-------|------------|--------------|-------------|----------|------|
| 亮度 (油明) | 30 | 130 | 450 | 1900 | 1900 | 130 |
| 续航 (小时) | 65 | 23 | 6 | 3.5 | 1 | - / |
| 射程(米) | 25 | 70 | 110 | 210 | 1 | - / |
| 发光强度 (坎德拉) | 156 | 1225 | 3025 | 11025 | 1 | - / |
| 防鉄落高度 | | | 1.5 | 送 | | |
| 防水級别 | | IP68(水下两米) | | | | |
| 尺寸 | 120mm | (长度) *25 | i.4mm(头 | 部直径)*2 | 3.8mm (筒 | 身直径) |
| 重量 | | | 裸机77克(| (不含电池) | | |
| 工作温度 | | -30 |)°C ~ 55°C / | -22°F ~ 13 | L°F | |
| 储存温度 | | -35 | 5°C ~ 65°C / | -31°F ~ 149 | 9°F | |

注:以上数据根据ANSI / PLATO FL1标准,使用一节CYANS



| 模式 | 低亮档 | 中亮档 | 高亮档 | 极亮档 | 爆闪档 | SOS | |
|----------------------|-------|------------------------------|--------------|-------------|----------|------|--|
| 亮度 (流明) | 30 | 130 | 450 | 1900 | 1900 | 130 | |
| 续航 (小时) | 65 | 23 | 6 | 3.5 | 1 | 1 | |
| 射程(米) | 25 | 70 | 110 | 210 | 1 | - / | |
| 发光强度 (坎德拉) | 156 | 1225 | 3025 | 11025 | 1 | - / | |
| 防鉄落高度 | | | 1.5 | 5米 | | | |
| 防水級别 | | IP68(水下两米) | | | | | |
| 尺寸 | 120mm | (长度) *25 | i.4mm(头 | 部直径)*2 | 3.8mm (筒 | 身直径) | |
| 重量 | | | 裸机77克(| (不含电池) | | | |
| 工作温度 | | -30°C ~ 55°C / -22°F ~ 131°F | | | | | |
| 储存温度 | | -35 | 5°C ~ 65°C / | -31°F ~ 149 | 9°F | | |

 

| 模式 | 低亮档 | 中亮档 | 高亮档 | 极亮档 | 爆闪档 | sos |
|----------------------|-------|----------|-----------|-----------|----------|------|
| 亮度 (流明) | 30 | 130 | 450 | 1900 | 1900 | 130 |
| 续航 (小时) | 65 | 23 | 6 | 3.5 | 1 | 1 |
| 射程(米) | 25 | 70 | 110 | 210 | 1 | 1 |
| 发光强度 (坎德拉) | 156 | 1225 | 3025 | 11025 | 1 | 1 |
| 防跌落高度 | | | 1.5 | 5米 | | |
| 防水級别 | | | IP68(2) | (下两米) | | |
| 尺寸 | 120mm | (长度) *25 | 5.4mm(头 | 部直径)*2 | 3.8mm (筒 | 身直径) |
| 重量 | | | 裸机77克 | (不含电池) | | |
| -/ | | 24 | 00.5 5505 | . 2205 12 | 105 | |

放电曲线

开/关机: 轻按尾部开关点亮,松手即关闭,重按直接开 机,进入记忆档位,再次重按尾部按键关机。

开机状态下,单击侧面按键切换档位,输出从当 前亮度开始,低档->中档-> 高档->极亮档顺序

开户摆闪:

快速轻按尾部开关两次触发爆闪, 松手关闭 重按锁定爆闪档, 再次重按关机: 开机状态下,双击侧面按键进入爆闪

爆闪状态下双击侧面按键进入SOS,单击退出

电量显示: 开机后侧边指示灯会自动指示电量5秒:

指示电量如下 绿灯:100%-70% 橙灯:70%-30% 红灯:30%-10% 红闪: 10%-1%,(闪烁提示)

智能降档:

为保证照明安全,以下情况产品会智能降低亮

• 当产品检测到电池电量不足时,产品会逐步 自动降低当前模式工作档位,直到降低到潜行

• 电池电量不能支撑产品照明时产品自动关

• 产品温度高于安全值,会通过温控降低产品 亭度,以避免产品损坏和伤及用户。

翻开充电口保护帽,将适配器的充电线插入产 品的Type-C充电口,支持5V/1A充电,充电时

显示红灯,充满显示绿灯,4小时左右充满(橙 灯表示充电异常)。充满后请拔下充电线,盖 上胶塞,(充电时,不支持点亮)。

·产品可装入1节18650电池,或2节CR123A电池

手电在使用过程中,手电表面温度在55℃以下

定期清理手电连接部件螺纹并涂上润滑油;

·为达到最佳防水性能,请定期检查防水O圈的

完整性,并请适量涂抹润滑油于防水O圈上以延

长其使用寿命。如O圈损坏,请及时更换原厂O圈

• 产品长时间放置不使用,请将电池从中取出,

以确保您所使用之产品的优异防水性能;

(使用2节CR123A电池不可以充电);

属于正常情况,请放心使用;

并妥善存放于阴凉干燥处;

首次使用前,请将电池充满电;

推荐使用

谨慎使用

禁止使用

电池适配情况:

CYANSKY BL18系列电池

有保护板的18650电池

其他电池

注意事项

儿童须在成人的监督下使用本产品; • 产品亮度高,请勿直视,否则会造成眼睛伤害 和短暂失明:

• 携带时请将筒身旋松半圈,让产品彻底断电,

• 请勿将装有电池的产品投入火中,否则会发生

• 请勿将打开电池盖的产品投入水中; • 请勿将电池的正负极短接。

保修条款

避免在携带时误点亮;

灯具产品自售出之日起15天内,在正常使用情况 下,出现产品质量问题,客户可选择更换新品, 所换产品应为同型号同规格的新品;如同型号同 规格的产品停止生产时,则调换不低于原产品性 能的同品牌同类产品。

5年免费保修期: 灯具产品自售出之日起5年内 电池1年内),用户在正常使用情况下,出现产品 质量问题,则享受免费维修服务。5年后可以进行 有偿维修,只收取成本费。 消费者保修时凭《保修卡》、购物发票或收据或

经销商对消费者提供服务,我公司将对经销商提 供服务支持。 保修服务不包括由以下原因造成的任何损坏或故

网上购物时零售商提供的号码与经销商联系,由

- 过高掉落、擅自修改或改造; • 粗暴操作或者误操作造成的损坏;
- 使用、存放或维护不当造成的损坏;
- 电池漏液;
- 盐水和腐蚀损坏机组:
- 普通磨损/褪色。

包装清单

P20R手电、绝缘垫片、1*BL1834锂电池、防水 圈、充电线、手绳、手电套、说明书、吊牌、 抱夹、保修卡。



东莞市亦明电子有限公司


CE FE LY X

CYANSKY



P20R Portable Outdoor Flashlight User Manual

| Specific | CHICH | | | | | |
|-------------------------|-----------------------------|------|-----------|------------|--------|-----|
| MODE | LOW | MED | HIGH | TURBO | STROBE | sos |
| OUTPUT (Lumens) | 30 | 130 | 450 | 1900 | 1900 | 130 |
| RUNTIME (Hours) | 65 | 23 | 6 | 3.5 | - / | -/ |
| (Meters) | 25 | 70 | 110 | 210 | - / | - / |
| INTENSITY (Candelas) | 156 | 1225 | 3025 | 11025 | - / | -/ |
| IMPACT RESISTANCE | | | 1.5 M | leters | | |
| SUBMERSIBLE | IP68(two meters underwater) | | | | | |
| SIZE | 4.72"*1.00"*0.94" | | | | | |
| WEIGHT | | 77 | g (exclud | ing batter | y) | |
| WORKING TEMPERATURE | | -3 | 0°C~55°C, | /-22°F-131 | °F | |
| STORAGE TEMPERATURE | | -3. | 5°C~65°C/ | -31°F~149 | 9°F | |

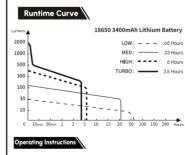

Power On/Off: Press the tail switch lightly to turn on; release to turn off. Press down firmly on the tail switch to power on, entering the memory mode. Press the tail switch again to turn off.

Adjusting Brightness: While turned on, single-click the side button to switch modes. Output starts from the current brightness level: Low -> Medium -> High -> Turbo.

Strobe Mode:
Quickly press the tail switch twice to trigger strobe mode; release to turn off. Press again to lock the strobe mode, and press once more to turn off. While on, double-click the side button to patter twite pender.

Activating SOS:

While in strobe mode, double-click the side button to activate SOS; single-click to exit SOS.

Battery Display: After turning on, the side indicator light will automatically display the battery level for 5 seconds:

- Green Light: 100% 70% • Orange Light: 70% - 30%
- Red Light: 30% 10% • Red Flash: 10% - 1% (flashing reminder)
- Smart Dimming: To ensure lighting safety, the product will intelligently reduce brightness in the following situations: • When the battery is low, it will gradually decrease the current mode until it reaches stealth mode.
- If the battery can't support lighting, the product will shut down.
- If the product's temperature exceeds the sofe value, it will lower brightness through temperature control to prevent damage or harm to the user.

Charging:
Open the charging port cover and insert the adapter's charging cable into the Type-C charging port. Supports 5V/IA charging, Red light displays while charging and turns green when fully charged (orange light indicates charging anomaly). Charging takes approximately 4 hours. After charging, unplug the cable and cover with the plug. (Lighting is

not supported during charging)

Battery compatibility:

| CYANSKY BL18 series batteries | |
|------------------------------------|-------------------|
| | Recommended usage |
| 8650 battery with protection plate | Use with coution |
| Disposable Ithium battery | Use with coution |
| Other batteries | Prohibited use |

• The product can be powered by either 18650*1 battery or CR123A*2 batteries (charging not supported with CR123A*2 batteries).

• During use, the surface temperature of the flashlight below 55°C is normal, so please use • Before first use, please fully charge the

 Reaularly clean the threads of the flashlight connection and apply lubricating oil;

 For optimal waterproof performance, please regularly check the integrity of the waterproof O-ring and apply a moderate amount of lubricating oil to extend its service life. If the O-ring is damaged, please replace if with a genuine O-ring from the manufacture to ensure excellent waterproof performance of the product you gray using: of the product you are using; • If the product is not used for a long time

Warranty

For the first 15 days from the date of sale, if there is a product quality problem under normal use, customers can choose to replace it with a new product of the same model and specification. If the product of the same model and specification has been discontinued, it will be replaced with a product of the same brand and class with not lower performance.

5-year free warranty period: From the date of sale, the lamp product has a free warranty period of 5 years (1 year for batteries). If there is a product quality problem under normal use, the user can enjoy free repair service. After 5 years, paid repair service will be provided.

please remove the battery and store it in a cool and dry place;

When carrying it, please loosen the body half a turn to completely cut off the power to avoid accidentally turning it on while carrying

• Children should use this product under adult The high brightness of the product should not be directly looked at, otherwise it may cause eye injury and temporary blindness;

• Do not throw the product with the battery into the fire, otherwise it may explode; • Do not throw the product with the battery cover opened into the water; • Do not short-circuit the positive and negative poles of the battery.

only cost fees will be charged.

only cost rees will be charged. When consumers seek warranty service, they should contact the dealer with the "Warranty Card", shopping invoice or receipt, or the code provided by the online retailer, and the dealer will provide service to the customer. Our company will provide service support to the dealer.

dealer.
Warranty service does not include any damage or malfunction caused by the following reasons:

 Dropping from high altitude, modification or alteration without permission; Damage caused by rough or mistaken

Damage caused by improper use, storage

Normal wear and tear; Battery leakage;

· Corrosion of the unit caused by saltwater; Ordinary wear/fading.

Included

P20R Flashlight, Insulating Gasket, 1*BL1834 Lithium Battery, Waterproof Ring, Charging Cable, Lanyard, Flashlight Holster, Instruction Manual, Hang Tag, Clip, Warranty Card.



CYANSKYLIGHT CO., LTD

Add: 601, 2# Building, Xiangdong Technopark, 7# Bainishan Middle Road, Dalingshan Town Dongguan, 523000, China

CE FE CH X